
English Simple Manual (簡易英語版)

IS02

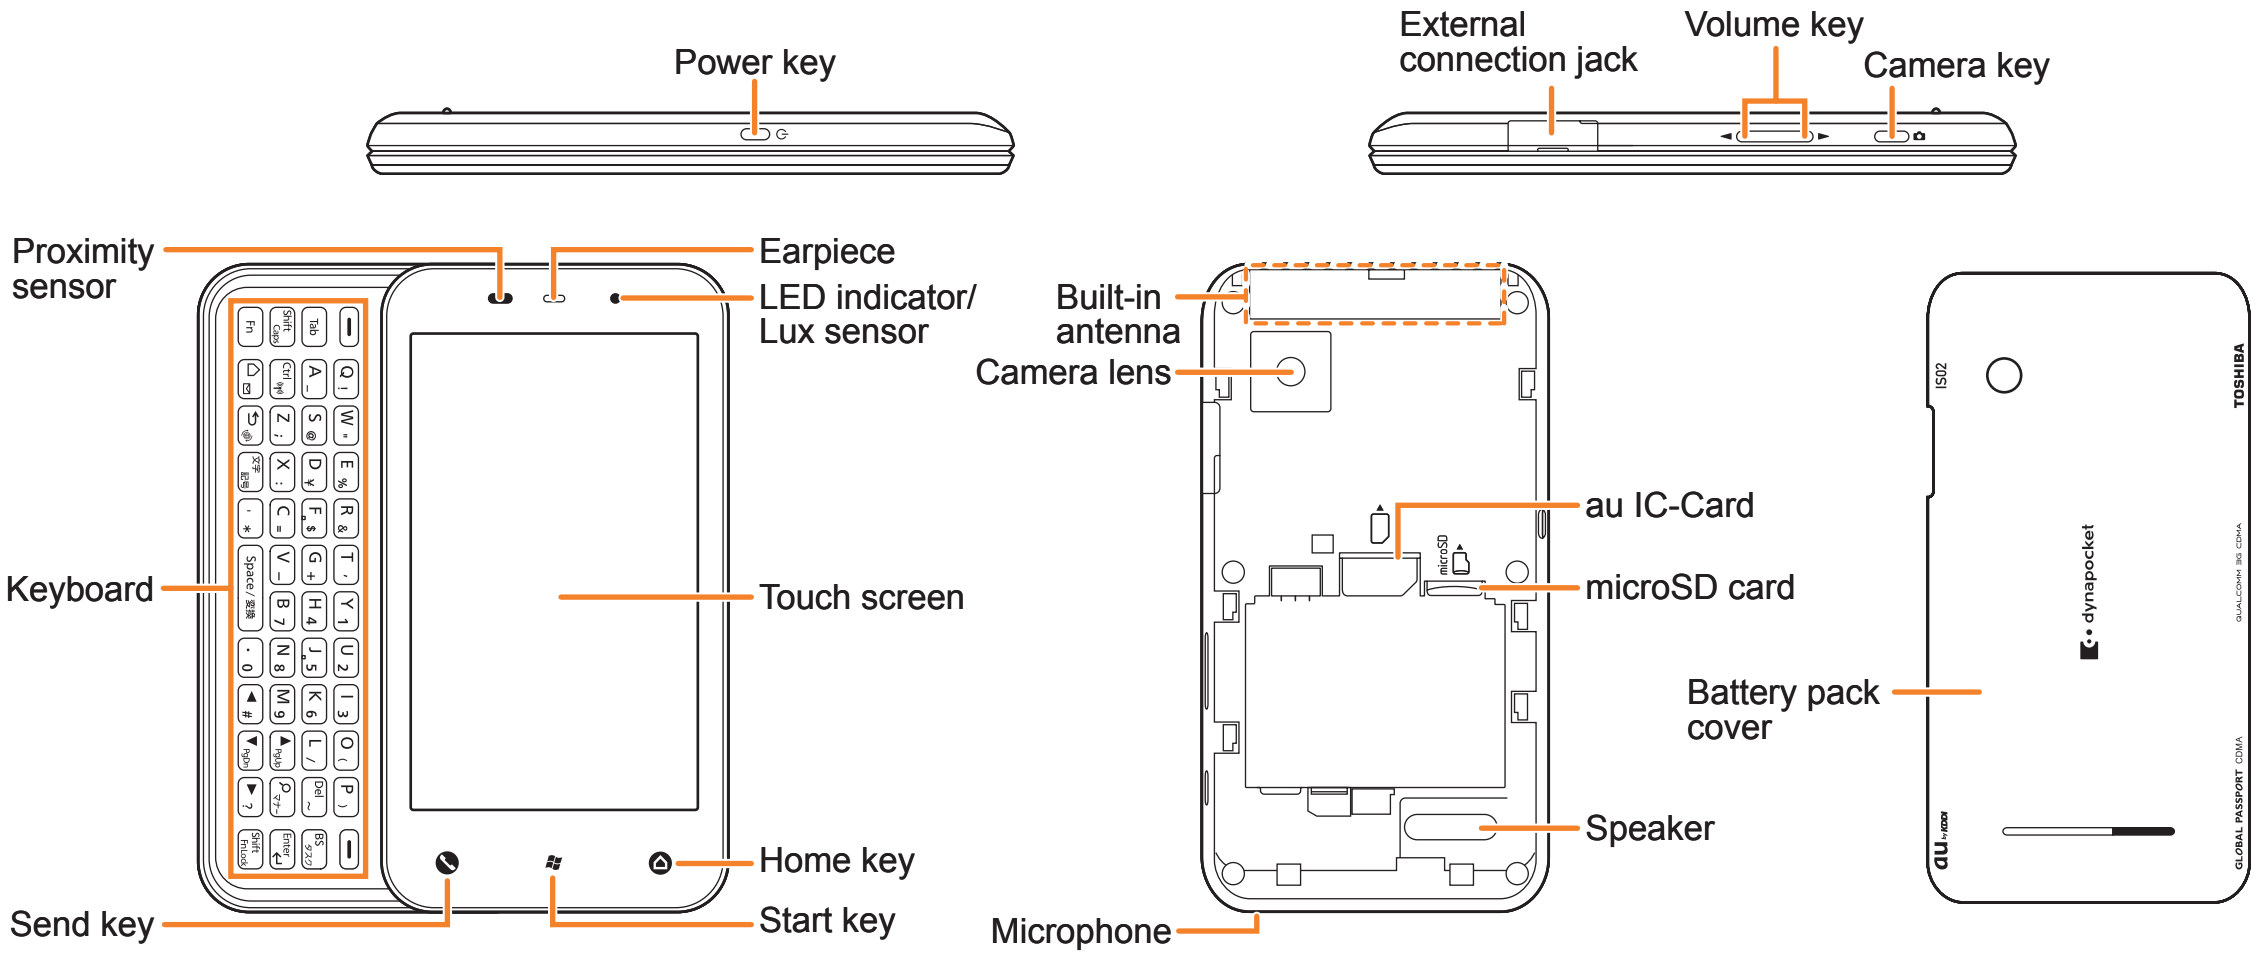

Turning Power On and Off

- **Turning Power On**

  Hold down for at least a few seconds.

- **Turning Power Off**

  Hold down for at least a few seconds. ▶Tap "電源OFF" (Power Off).

Checking Your Own Phone Number and E-mail Address

Tap . ▶Tap "設定" (Settings). ▶Tap "個人" (Personal).
▶Tap "自局番号" (My Number).

Making and Answering a Call

- **Making a Call**

  Tap . ▶Enter the phone number you want to call. ▶Tap 通話 .

  To end a call: Tap 終了 .

- **Answering a Call**

  When the phone starts ringing, tap .

  To adjust the earpiece volume during a call: Use / .

簡易英語

Storing and Recalling Address Book Entries

● **Storing an Entry**

Tap [icon]. ▶Tap "連絡先" (Contacts). ▶Tap [icon].
▶Tap "Outlook連絡先" (Outlook Contact). ▶Enter the data. ▶Tap [icon].

● **Recalling an Entry**

Tap the entry you want to view the detail.

Using the Camera (Movie and Snapshot)

● **Recording a Movie Clip**

Hold down [icon] for at least one second.
▶Tap the capture mode icon to switch to [icon] (video mode).
▶Tap [icon] to start recording.
▶Tap [icon] to stop recording.
▶Tap [OK] to store the movie.

● **Taking a Snapshot**

Hold down [icon] for at least one second.
▶Tap the capture mode icon to switch to [icon] (single photo mode).
▶Tap [icon] to take a snapshot.
▶Tap [OK] to store the photo.

Making an International Call

Ex: To call 212-123-△△△△ in the USA

「0」「0」「1」「0」「1」「0」▶「1」▶「2」「1」「2」

International access code　Country code (USA)　Area code

▶「1」「2」「3」▶ △△△△ ▶Tap [通話] .

Number you want to call

Other Handy Features

● **Setting the Manner Mode**

Hold down [icon] for at least one second.
Repeat the above operation to disable the Manner Mode.

For inquiries, please contact
au Customer Service Center (General Information)
● If you are calling from a landline phone: [フリーコール] 0077-7-111 (toll free)
● If you are calling from an au mobile phone: 157 (toll free)